


9

AVVITARE

- TO SCREW
- APRETAR
- FESTSCHRAUBEN
- VISSER
- VASTSCHROEVEN
- MEGHÚZNI
- WKRECIC
- PRIVITI

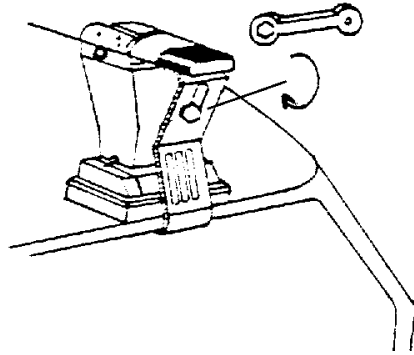


10


OPTIONAL

INSERIRE

- INSERT
- CUBRIR
- STOPFEN
- ENFILER
- BEVESTIG
- TOLJA FEL
- NALOZIC
- VSTAVITI

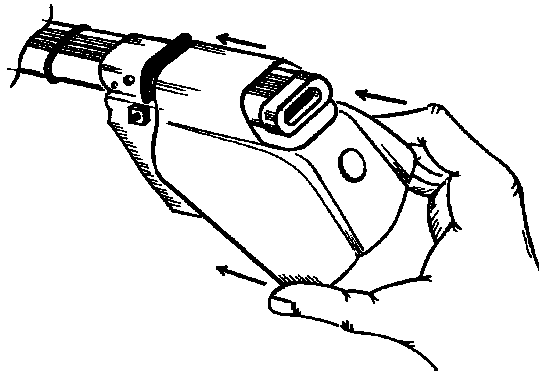

11

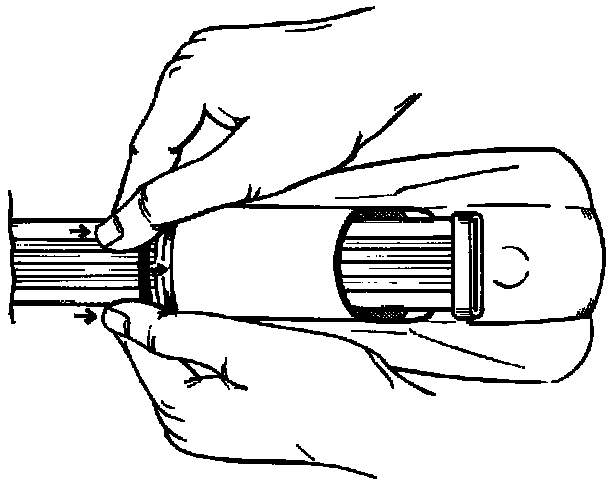

15co

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASITÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAĚI


“LOGICO”

1



MISURE PRECISE

- EXACT DIMENSIONS
- MEDIDAS CORRECTAS
- GENAUUE MASSE
- MESURES EXACTES
- EXACTE AFMETINGEN
- PONTOS MÉRET
- DOKLADNE WYMIARY
- TO»NE MERE

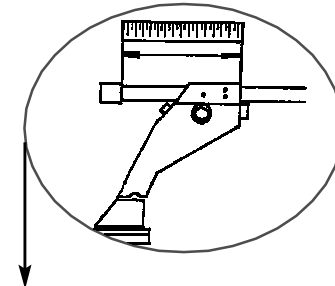


A ANTERIORE A

FRONT
DELANTERO
VORDERE
AVANT
VOORSTE G.
ELÖRE
SPREDAJ

P POSTERIORE P

REAR
TRASERO
HINTERE
ARRIERE
ACHTERSTE G.
HÁTRA
ZADAJ



A ANTERIORE

FRONT
DELANTERO
VORDERE
AVANT
VOORSTE G.
ELSŐ RÚD
PRZOD
SPREDAJ

P POSTERIORE


REAR
TRASERO
HINTERE
ARRIERE
ACHTERSTE G.
HÁTSÓ RÚD
TYL
ZADAJ

RENAULT TWINGO

110 mm.

110 mm.

2

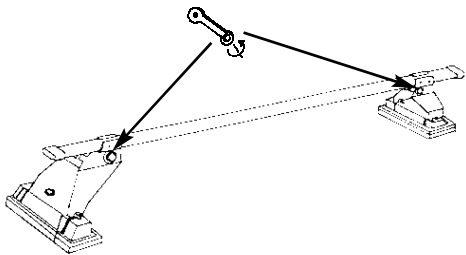


AVVITARE (A FONDO)

TO SCREW (DOWN)
 APRETAR (A FONDO)
 FESTSCHRAUBEN
 VISSER (À FOND)
 VASTSCHROEVEN
 MEGHÚZNI
 WKRECIC DO KONCA
 PRIVITI (DO KONCA)


3

TAGLIARE

TO CUT
 CORTAR
 SCHNEIDEN
 COUPER
 SNIJDEN
 ELVÁGNI
 OBCIAC
 ODREZATI

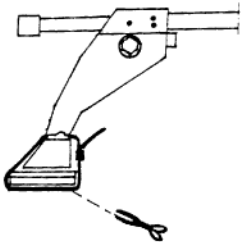


4

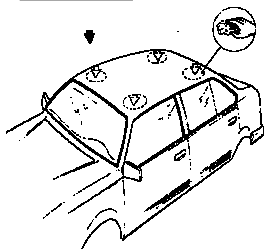

PULIRE IL TETTO

CLEAN THE ROOF
 LIMPIAR EL TECHO
 DACH REINIGEN
 NETTOYER LE TOIT
 DAK SCHOONMAKEN
 TISZTÍTSÁ MEG A TETŐT
 WYCZYŚCIC DACH
 O»ISTITI STREHO

5

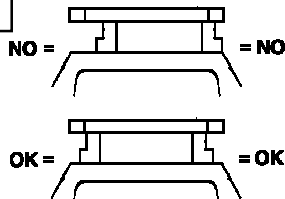

CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR
 CARRIER ON THE ROOF

CENTRAR EL PORTAEQUIPAJES
 SOBRE EL TECHO

LASTENTRÄGER AUF DEM DACH
 ZENTRIEREN

CENTRER LE TOIT AVEC LE
 PORTE-TOUIT

PLAATS DE UNIVERSELE DRAGER
 IN HET MIDDEN VAN HET DAK

HELYEZZE KÖZÉPRE A RUDAKAT

WYSRODKOWAC BAGAŻNIK NA DACHU

CENTRIRATI PRTLJA/ENIK NA STREHO


6

MODELLI AUTO

CARS
 COCHES
 WAGEN
 VOITURES
 AUTO
 AUTÓ TIPUS
 MODELI AVTOMOBILOV

MONTAGGIO GANASCINE

HOW TO ASSEMBLE THE CLAMPS
 COMO MONTAR LAS FIJACIONES
 ZUSAMMENBAU DER
 SPANNBACKEN
 MONTAGE CROCHET
 MONTAGE VAN DE KLEMMEN
 RÖGZITŐ FÜLEK
 MONTAZ SZCZEK MOCUJACYCH
 MONTA/EA NAPENJALNIKA



ANTERIORE	POSTERIORE
FRONT DELANTERO VORDERE AVANT VOORSTE G. ELSŐ RÚD PRZOD SPREDAJ	REAR TRASERO HINTERE ARRIERE ACHTERSTE G. HÁTSÓ RÚD TYL ZADAJ


N° N°

RENAULT TWINGO	2	15P
-----------------------	----------	------------

7

MODELLI SENZA PREDISPOSIZIONE DELLA CASA AUTO:

CARS WITHOUT PRE-EXISTING FIXING POINT
 PARA COCHES SIN PREDISPOSICION DEL FABRICANTE
 AUTOS OHNE VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE
 VOITURES SANS POINTS DE FIXAGE PRÉVUS PAR LE CONSTRUCTEUR
 AUTO'S ZONDER DOOR DE FABRIKANT VOORZIENE BEVESTIGINGSPUNTEN
 FELHELYEZES GYÁRI JELÖLÉS NÉLKÜLI AUTÓKRA
 SAMOCHODY BEZ PRZEWIDZIANYCH PUNKTOW UMOCOWANIA
 MODELI Z NEPREDVIDENIM LE/ÆI©»EM S STRANI PROIZVAJALCA

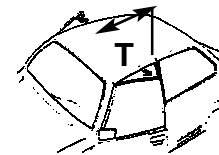

ANTERIORE



FRONT
 DELANTERO
 VORDERE
 AVANT
 VOORSTE G.
 ELSŐ RÚD
 PRZOD
 SPREDAJ

MODELLI AUTO

RENAULT TWINGO

T

350 mm.

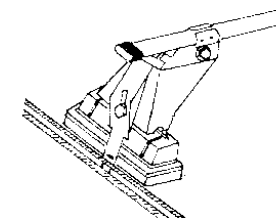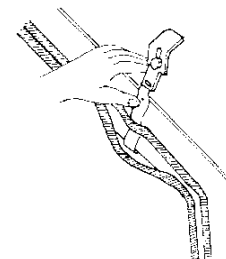

8

MODELLI CON PREDISPOSIZIONE DELLA CASA AUTO:


CARS WITH PRE-EXISTING FIXING POINT FROM MANUFACTURER
 MODELOS CON PREDISPOSICION DEL FABRICANTE
 AUTOS MIT VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE
 VOITURES AVEC POINTS DE FIXAGE PRÉVUS PAR LE CONSTRUCTEUR
 AUTO'S MET DOOR DE FABRIKANT VOORZIENE MONTAGEPUNTEN
 FELHELYEZÉS GYÁRTÓ ÁLTAL KIJELÖLT PONTRA
 SAMOCHODY Z PRZEWIDZIANYMI PUNKTAMI UMOCOWANIA
 MODELI Z PREDVIDENIM LE/ÆI©»EM S STRANI PROIZVAJALCA

MODELLI AUTO

RENAULT TWINGO

SCALZARE LA GUARNIZIONE

REMOVE THE GASKET
 QUITTE LA MOLDURA
 DICHTUNG HERAUSZIEHEN
 OTER LA GUARNITURE
 PAKKUNG LOSMAKEN
 KIHAJTANI A TÖMITÖGUMIT
 WYCIAGNAC USZCZELKE
 ODMAKNITI TESNILO

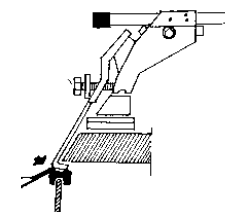

POSTERIORE

REAR
 TRASERO
 HINTERE
 ARRIERE
 ACHTERSTE G.
 HÁTSÓ RÚD
 TYL
 ZADAJ