
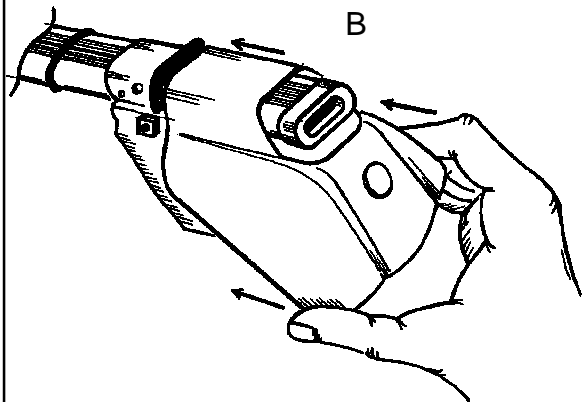


8


OPTIONAL

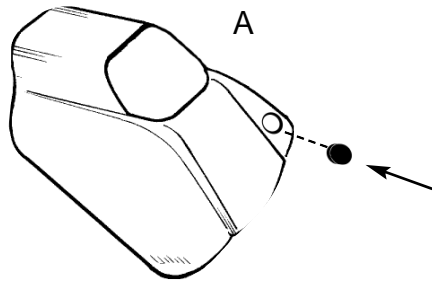

**INSERIRE**

- INSERT
- CUBRIR
- STOPFEN
- ENFILER
- BEVESTIG
- TOLJA FEL
- NALOZIC
- VSTAVITI

9

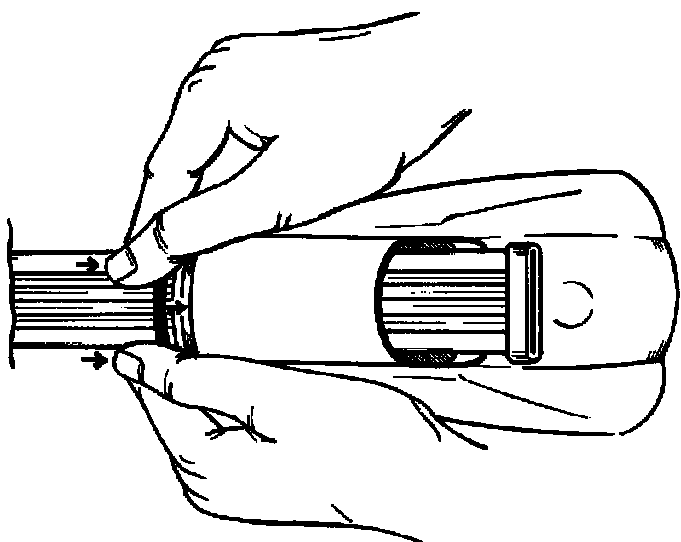

**55co**

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE -  
 MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES -  
 SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI


# “LOGICO”

1



**MISURE PRECISE**

- EXACT DIMENSIONS
- MEDIDAS CORRECTAS
- GENAUE MASSE
- MESURES EXACTES
- EXACTE AFMETINGEN
- PONTOS MÉRET
- DOKLADNE WYMIARY
- TO»NE MERE

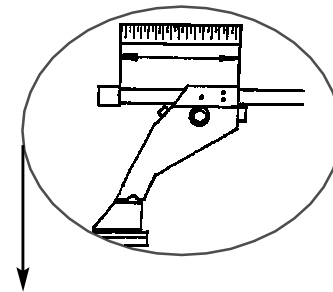


**A** ANTERIORE **A**

FRONT  
 DELANTERO  
 VORDERE  
 AVANT  
 VOORSTE G.  
 ELŐRE  
 SPREDAJ

**P** POSTERIORE **P**

REAR  
 TRASERO  
 HINTERE  
 ARRIERE  
 ACHTERSTE G.  
 HÁTRA  
 ZADAJ



**A**

**ANTERIORE**

FRONT  
 DELANTERO  
 VORDERE  
 AVANT  
 VOORSTE G.  
 ELŐRŐD  
 PRZOD  
 SPREDAJ

**P**


**POSTERIORE**

REAR  
 TRASERO  
 HINTERE  
 ARRIERE  
 ACHTERSTE G.  
 HÁTSÓ RŐD  
 TYL  
 ZADAJ


ALFA ROMEO 147 5P

128 mm.


132 mm.

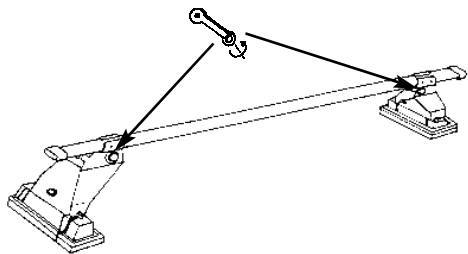**2****AVVITARE (A FONDO)**


TO SCREW (DOWN)  
 APRETAR (A FONDO)  
 FESTSCHRAUBEN  
 VISSER (À FOND)  
 VASTSCHROEVEN  
 MEGHÚZNI  
 WKRECIC DO KONCA  
 PRIVITI (DO KONCA)

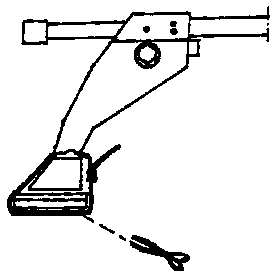**3****TAGLIARE**

TO CUT  
 CORTAR  
 SCHNEIDEN  
 COUPER  
 SNIJDEN  
 ELVÁGNI  
 OBCIAC  
 ODREZATI

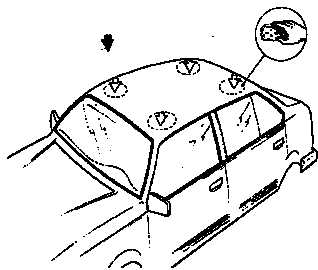
**4****PULIRE IL TETTO**

CLEAN THE ROOF  
 LIMPIAR EL TECHO  
 DACH REINIGEN  
 NETTOYER LE TOIT  
 DAK SCHOONMAKEN  
 TISZTÍTSÁ MEG A TETŐT  
 WYCZYSCIC DACH  
 OČISTIŠTI STREHO

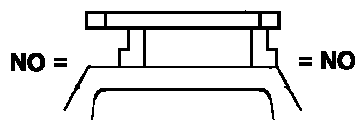**5**

NO =

= NO

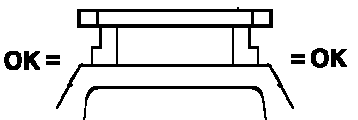

OK =

= OK

**CENTRARE IL P. TUTTO SUL TETTO**

CENTRE THE UNIVERSAL BAR  
 CARRIER ON THE ROOF  
 CENTRAR EL PORTAEQUIPAJES  
 SOBRE EL TECHO  
 LASTENTRÄGER AUF DEM DACH  
 ZENTRIEREN  
 CENTRER LE TOIT AVEC LE  
 PORTE-TOUT  
 PLAATS DE UNIVERSELE DRAGER  
 IN HET MIDDEN VAN HET DAK  
 HELYEZZE KÖZÉPRE A RUDAKAT  
 WYSRODKOWAC BAGAZNIK NA DACHU  
 CENTRIRATI PRTLJAŠENIK NA STREHO

**6****MODELLI CON PREDISPOSIZIONE DELLA CASA AUTO:**

CARS WITH PRE-EXISTING FIXING POINT FROM MANUFACTURER  
 MODELOS CON PREDISPOSICION DEL FABRICANTE  
 AUTOS MIT VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE  
 VOITURES AVEC POINTS DE FIXAGE PREVUS PAR LE CONSTRUCTEUR  
 AUTO'S MET DOOR DE FABRIKANT VOORZIENE MONTAGEPUNTEN  
 FELHELYEZÉS GYÁRTÓ ÁLTAL KIJELÖLT PONTRA  
 SAMOCHODY Z PRZEWIDZIANYMI PUNKTAMI UMOCOWANIA  
 MODELI Z PREDVIDENIM LEŽEŇEM S STRANI PROIZVAJALCA

**MODELLI AUTO****ALFA ROMEO 147 5P.****7****AVVITARE**

TO SCREW  
 APRETAR  
 FESTSCHRAUBEN  
 VISSER  
 VASTSCHROEVEN  
 MEGHÚZNI  
 WKRECIC  
 PRIVITI

