

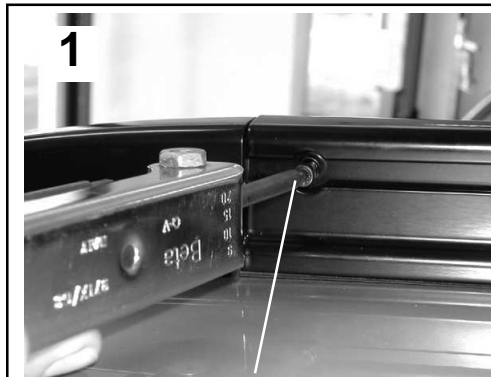


DAIHATSU: TERIOS CX

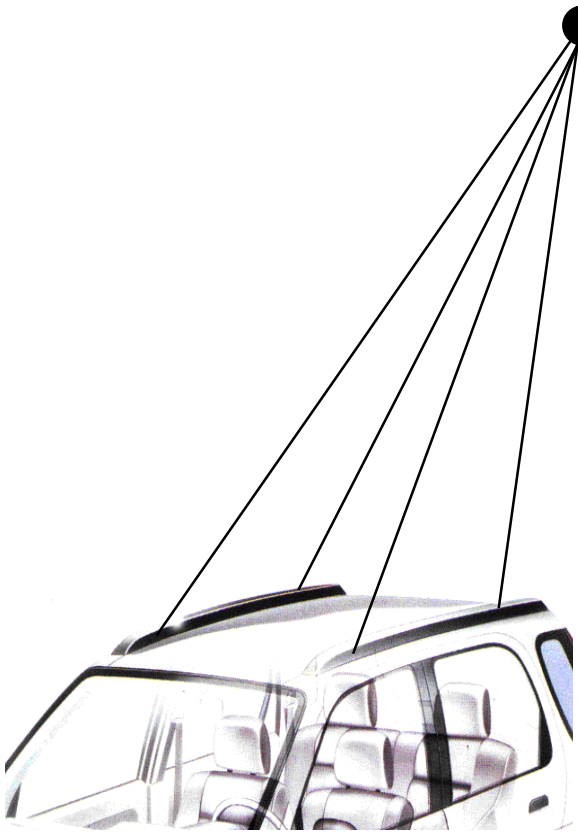


1

SVITARE
UNSCREW
AFLOJAR
ABSCHRAUBEN
DEVISSER
OPENSCHROEVEN
KICSAVARNI
WYKRECIC
ODVITI

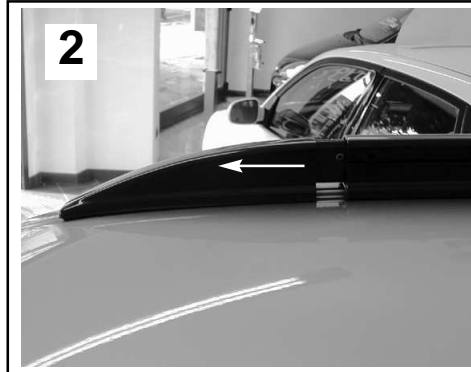


2

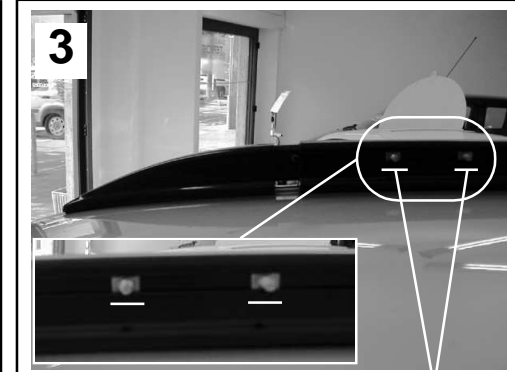


3

INSERIRE
INSERT
CUBRIR
STOPFEN
ENFILER
BEVESTIG
TOLJA FEL
NALOZIC
VSTAVITI

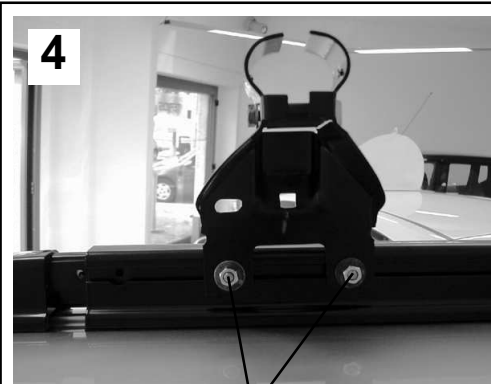

4


AVVITARE (A FONDO)
TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN
MEGHÚZNI
WKRECIC DO KONCA
PRIVITI (DO KONCA)

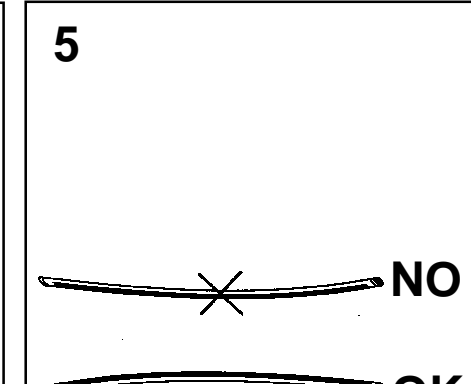

5

NO

OK

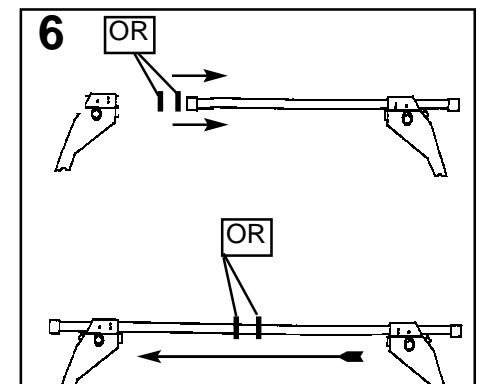


6

INSERIRE
INSERT
CUBRIR
STOPFEN
ENFILER
BEVESTIG
TOLJA FEL
NALOZIC
VSTAVITI

DAIHATSU: TERIOS CX

7

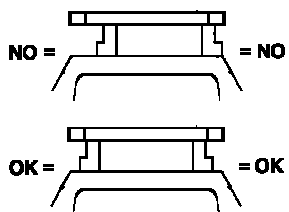

CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR CARRIER ON THE ROOF

CENTRAR EL PORTAEQUIPAJES SOBRE EL TECHO

LASTENTRÄGER AUF DEM DACH ZENTRIEREN

CENTRER LE TOIT AVEC LE PORTE-TOUT


PLAATS DE UNIVERSELE DRAGER IN HET MIDDEN VAN HET DAK

HELYEZZE KÖZÉPRE A RUDAKAT

WYSRODKOWAC BAGAŻNIK NA DACHU

CENTRIRATI PRTLJAŽENIK NA STREHO

8

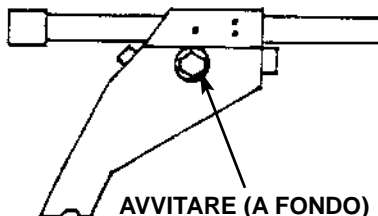

AVVITARE (A FONDO)

TO SCREW (DOWN)

APRETAR (A FONDO)

FESTSCHRAUBEN

VISSER (À FOND)

VASTSCHROEVEN



MEGHÚZNI

WKRECIC DO KONCA

PRIVITI (DO KONCA)

9

OPTIONAL

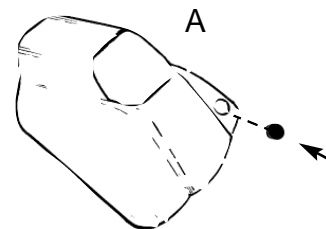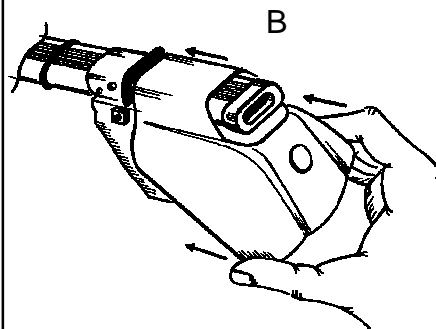

INSERIRE

INSERT

CUBRIR

STOPFEN


ENFILER

BEVESTIG

TOLJA FEL

NALOŽIC


VSTAVITI

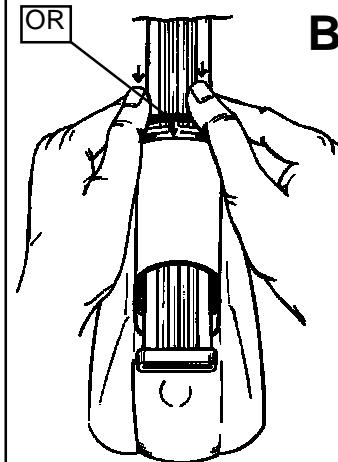

10



11

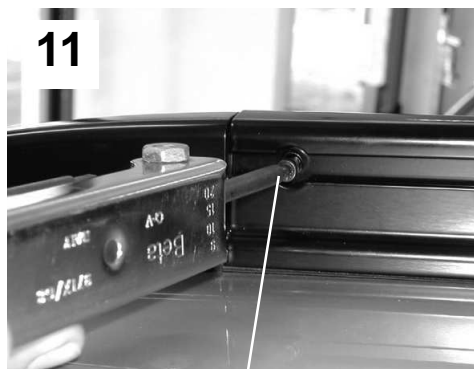

AVVITARE

TO SCREW

APRETAR

FESTSCHRAUBEN

VISSER

VASTSCHROEVEN

MEGHÚZNI

WKRECIC

PRIVITI

12

